


# **AUTOOL HTS705**

## **Dry Ice Blasting Machine**

### **User Manual**

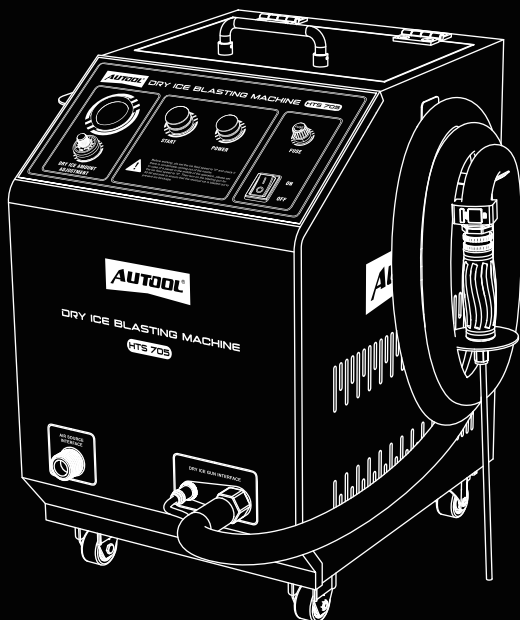



## 深圳市偶然科技有限公司

广东省深圳市宝安区航城锦驰产业园

📍 Hangcheng Jinchí Industrial Park, Bao'an, Shenzhen, China

🌐 [www.autooltech.com](http://www.autooltech.com)

✉ [aftersale@autooltech.com](mailto:aftersale@autooltech.com)

☎ +86-755-2330 4822 / +86-400 032 0988



RoHS  
Made in China



## COPYRIGHT INFORMATION

---

### Copyright

- All rights reserved by AUTOOL TECH. CO., LTD. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of AUTOOL. The information contained herein is designed only for the use of this unit. AUTOOL is not responsible for any use of this information as applied to other units.
  - Neither AUTOOL nor its affiliates shall be liable to the purchaser of this unit or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of: accident, misuse, or abuse of this unit, or unauthorized modifications, repairs, or alterations to this unit, or failure to strictly comply with AUTOOL operating and maintenance instructions.
  - AUTOOL shall not be liable for any damages or problems arising from the use of any options or any consumable products other than those designated as original AUTOOL products or AUTOOL approved products by AUTOOL.
  - Other product names used herein are for identification purposes only and may be trademarks of their respective owners. AUTOOL disclaims any and all rights in those marks.
- 

### Trademark

Manual are either trademarks, registered trademarks, service marks, domain names, logos, company names or are otherwise the property of AUTOOL or its affiliates. In countries where any of the AUTOOL trademarks, service marks, domain names, logos and company names are not registered, AUTOOL claims other rights associated with unregistered trademarks, service marks, domain names, logos, and company names. Other products or company names referred to in this manual may be trademarks of their respective owners. You may not use any trademark, service mark, domain name, logo, or company name of AUTOOL or any third party without permission from the owner of the applicable trademark, service mark, domain name, logo, or company name. You may contact AUTOOL by visiting AUTOOL at <https://www.autooltech.com>, or writing to [aftersale@autooltech.com](mailto:aftersale@autooltech.com), to request written permission to use materials on this manual for purposes or for all other questions relating to this manual.

## CAUTIONS

---

### Warning



Before using the instrument, please read this manual carefully for proper operation.

- ▶ If cleaning moving objects, firstly be sure to turn off the drive power of the objects to be cleaned.
- ▶ The temperature of dry ice is -78.5 degrees, and gloves must be worn for long-term contact with dry ice to prevent burns.
- ▶ The object to be cleaned and sprayed contains a lot of dust, so be sure to wear a protective mask.
- ▶ The spray head shall not against people, and the dry ice particles sprayed will hurt people.
- ▶ Cleaning with dry ice will produce certain noise, and it is necessary to wear noise-proof earmuffs during operation.
- ▶ It is forbidden to touch dry ice and the barrel of ice spraying gun.
- ▶ When adding dry ice, it must be kept clean and no other foreign objects fall into the equipment.
- ▶ This equipment uses solid CO<sub>2</sub> particles, and ventilation must be ensured when operating dry ice cleaning.
- ▶ Before working, it is necessary to check whether goggles, earmuffs, work clothes and gloves are worn.
- ▶ Before each operation, first set the ice feeding speed to "0" and test whether there is condensed water sprayed from the nozzle.
- ▶ When the operation is not finished and suspended, please adjust the ice feeding speed to "0", and then start the spray gun to spray for 30-50s to ensure that the residual ice in the feeding pipe is discharged and prevent ice blocking.
- ▶ To ensure that the compressed air pressure flow of the air source is sufficient, please choose the air source supply pipe with an outer diameter greater than DN20 and an air source pressure greater than 6bar, so as to achieve better cleaning effect.
- ▶ To prevent electric shock, please do not touch the working equipment in the wet place or operate the equipment in the rain.

- In case of equipment failure during operation, the power supply shall be disconnected immediately.

# TABLE OF CONTENTS

<b>Product Introduction</b> .....	2
Overview .....	2
Applicable industry field .....	2
Function features .....	2
Technical parameters .....	3
<b>Product Structure</b> .....	4
Machine structure.....	4
Control panel introduction .....	5
<b>Operations Instruction</b> .....	6
Equipment debugging .....	6
Adjusting the volume of dry ice blasting .....	6
Final work.....	6
<b>Common Problems And Troubleshooting</b> .....	7
Common faults.....	7
Analysis and treatment method.....	7
<b>Description Of Accessories</b> .....	9
<b>Maintenance Service</b> .....	10
Maintenance.....	10
<b>Warranty</b> .....	11
Warranty access.....	11
Disclaimer .....	11
<b>Return &amp; Exchange Service</b> .....	12
Return & Exchange.....	12

# PRODUCT INTRODUCTION

---

## Overview

Dry ice cleaning uses compressed air as power to spray dry ice particles to the surface of the cleaned object at supersonic speed. However, it does not rely solely on the kinetic energy of dry ice particles, but uses the ultra-low temperature performance of dry ice to achieve the purpose of decontamination.

Dry ice spraying medium - dry ice particles accelerate in the high-pressure air flow and impact the surface to be cleaned. The unique feature of dry ice cleaning is that the dry ice particles are vaporized at the moment during cleaning, and the momentum of dry ice disappears at the moment of impact. The heat exchange between dry ice particles and the cleaning surface occurs rapidly, resulting in the rapid sublimation of solid CO<sub>2</sub> into gas, and the volume expansion of dry ice particles is nearly 800 times within a few thousandths of a second, thus causing "micro explosion" at the impact point. Due to the volatilization of CO<sub>2</sub>, no secondary waste is generated during the dry ice cleaning process, and only the dirt that needs to be cleaned.

---

## Applicable industry field

- Dry ice blasters are suitable for removing stuck and flaking formulations, silicone and rubber residues, oils, greases, turpentine, asphalt, dirt, inks, resins, adhesives, waxes and paints, chewing gum, and graffiti. It has been widely used in rubber, casting, automobile, marine, electric power, chemical, printing, plastic, food, pharmaceutical and aviation fields.
- 

## Function features

- **Effective cleaning equipment for improving productivity.**  
The main function of the dry ice blasters is to clean different equipment. On the one hand, dry ice cleaning can avoid the impact of shutdown on production, and at the same time, it can reduce the disassembly and damage of equipment, fundamentally protect the equipment and improve productivity.
- **Avoid personal injury caused by hazardous substances.**  
Cleaning with dry ice instead of toxic chemical to avoid long-term adhesion of undesirable substances to the equipment, affecting the overall operation and causing injury to

personnel.

- **Quickly remove all kinds of intractable dirt.**

The use of dry ice blaster can thoroughly remove the attached dirt and protect the equipment to avoid affecting the operation and use of the equipment during cleaning.


## Technical parameters

Power Supply	<b>110V/220V</b>
Dry Ice Volume	<b>5.0kg</b>
Compressed Air Flow	<b>&gt;1~3m³/min</b>
Dry Ice Particle State	<b>3mm</b>
Air Supply Pressure	<b>0.3~0.8Mpa</b>
Dry Ice Blasting Volume (Adjustable)	<b>0~3.2Kg/min</b>
Product Size	<b>350*450*575mm</b>
Net Weight (US/EU)	<b>45kg/39kg</b>
Gross Weight (US/EU)	<b>50kg/44kg</b>




## PRODUCT STRUCTURE

### Machine structure

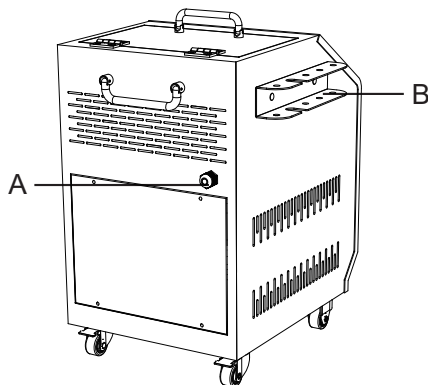


<b>A</b>	Power cord	<b>B</b>	Hanger of spray gun pipe
----------	------------	----------	--------------------------

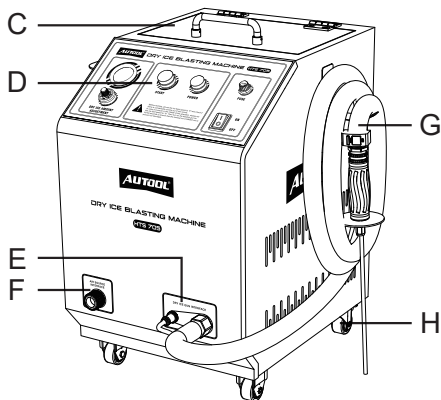

<b>C</b>	Dry ice tank	<b>D</b>	Control panel
<b>E</b>	Dry ice gun interface	<b>F</b>	Air source interface
<b>G</b>	Ice spray gun	<b>H</b>	Caster

## Control panel introduction

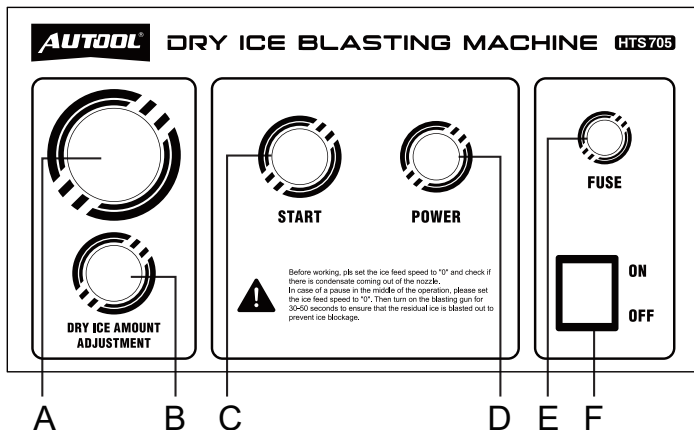

<b>A</b>	Pressure gauge	<b>B</b>	Dry ice volume adjustment controller
<b>C</b>	Start / Cleaning controller	<b>D</b>	Power indicator light
<b>E</b>	Fuse	<b>F</b>	Power switch

## OPERATIONS INSTRUCTION

---

### Equipment debugging

- Connect the host to the external air source and external power supply. Check whether the data of the air pressure indicator is normal and whether the power connection is normal (make sure the power supply is grounded normally).
  - Make preparations for testing machine, including connecting the machine and accessories properly, checking whether the parts are loose, and cleaning the unnecessary items placed on the machine body or the work area.
  - Turn on the power switch, then turn it to start mode first. And then press the start switch on the handle to run, adjust the dry ice volume from 0 to its maximum, check whether there is any abnormality, and then put dry ice materials into the machine for trial operation.
- 

### Adjusting the volume of dry ice blasting

- Add an appropriate volume of dry ice and cover the lid.
  - According to the required cleaning degree, turn the dry ice volume adjusting controller to achieve the best effect as needed (it is recommended to set it to "5" first and adjust it according to the cleaning effect).
  - If the barrel with smaller inner diameter is adopted, it is recommended to set it to "3" and then increase it as appropriate.
  - After confirmation, align the spray gun with the parts to be cleaned, and press the start switch on the handle to enter the cleaning procedure.
- 

### Final work

- Turn the dry ice volume adjusting controller to "0" and start the spray gun to spray for 30-50s until no water is sprayed.
- The dry ice residue can be removed by extending the product's spraying time, and manual cleaning is required if necessary.
- Turn off the power switch, disconnect the air source, and store the spray gun and accessories.

## COMMON PROBLEMS AND TROUBLESHOOTING

---

### Common faults

#### ► The ice is blocked in the ice hopper in the dry ice box.

Analysis and treatment method:

- Stop the operation and open the cover plate to see if there is too much dry ice. If there is too much, take out part of the dry ice and then continue.
  - Check whether the vibration pump works. If not, contact the manufacturer for replacement.
  - When dry ice is filled into the funnel, it will instantly take away the air inside the funnel to form condensed caking. It is necessary to take the steel bar at the center of the funnel to move up and down manually.
- 

### Common faults

#### ► The dry ice pipe is vented but does not discharge ice (internal ice blockage).

Analysis and treatment method:

- The ice blockage of the dry ice pipe is due to intermittent use and intermittent shutdown, and then immediately shut down. The residual dry ice in the ice outlet pipe is mixed with compressed air to cause freezing. If this is the case, first adjust the ice discharge volume to 0, then turn on the spray gun switch and continue to start the machine for 3 minutes, then adjust the ice discharge volume to 20% - 30%, and then see the effect of ice discharge.
- 

### Common faults

#### ► The dry ice pipe leaks ice and air.

Analysis and treatment method:

- Check the air source to ensure that the compressed air supplied to the dry ice blaster is free of oil and water.
  - The dry ice pipe has been used for a long time, and the dry ice has been rubbing against the pipe wall for a long time, resulting in the internal thinning. Contact the manufacturer for replacement.
-

## Common faults

### Analysis and treatment method:

► **The cleaning effect is not perfect, carbon deposits and other intractable stains are not cleaned thoroughly.**

- If the cleaning is not complete, first check whether the air pressure and flow of the external air source are insufficient. The working pressure of the dry ice machine is not less than 6bar and the flow rate is not less than 1m<sup>3</sup>/min. If the air supply pipe is too thin, too long, or directly connected to the quick interface, it will cause the pressure of the pipeline to drop too much. In this case, it is considered to directly connect the blaster to the main air supply pipe before operation.

## DESCRIPTION OF ACCESSORIES

---

Name	Quantity	Name	Quantity
Intake hose (Connect to external air source)	1	Ice shovel	1
Ice outlet pipe (With signal line and switch)	1	Fuses	2
Rotatable ice spray handle	1	Ground clip wire	2
Ice spray barrel	4	Ground wire connector	1
Earplugs	1	Certificate	1
Safety goggles	1	User manual	1
Gloves	1		

## MAINTENANCE SERVICE

---

Our products are made of long-lasting and durable materials, and we insist on perfect production process. Each product leaves the factory after 35 procedures and 12 times of testing and inspection work, which ensures that each product has excellent quality and performance.

---

**Maintenance** To maintain the performance and appearance of the product, it is recommended that the following product care guidelines be read carefully:

- Be careful not to rub the product against rough surfaces or wear the product, especially the sheet metal housing.
- Please regularly check the product parts that need to be tightened and connected. If found loose, please tighten it in time to ensure the safe operation of the equipment. The external and internal parts of the equipment in contact with various chemical media should be frequently treated with anti-corrosion treatment such as rust removal and painting to improve the corrosion resistance of the equipment and extend its service life.
- Comply with the safe operating procedures and do not overload the equipment. The safety guards of the products are complete and reliable.
- Unsafe factors are to be eliminated in time. The circuit part should be checked thoroughly and the aging wires should be replaced in time.
- Adjust the clearance of various parts and replace worn (broken) parts. Avoid contact with corrosive liquids.
- When not in use, please store the product in a dry place. Do not store the product in hot, humid, or non-ventilated places.

## WARRANTY

---

From the date of receipt, we provide a three-year warranty for the main unit and all the accessories included are covered by a one-year warranty.

---

### Warranty access

- The repair or replacement of products is determined by the actual breakdown situation of product.
- It is guaranteed that AUTOOL will use brand new component, accessory or device in terms of repair or replacement.
- If the product fails within 90 days after the customer receives it, the buyer should provide both video and picture, and we will bear the shipping cost and provide the accessories for the customer to replace it free of charge. While the product is received for more than 90 days, the customer will bear the appropriate cost and we will provide the parts to the customer for replacement free of charge.

### These conditions below shall not be in warranty range

- The product is not purchased through official or authorized channels.
- The product breakdown because the user does not follow product instructions to use or maintain the product.

We AUTOOL pride ourselves on superb design and excellent service. It would be our pleasure to provide you with any further support or services.

---

### Disclaimer

All information, illustrations, and specifications contained in this manual, AUTOOL reserves the right of modify this manual and the machine itself with no prior notice. The physical appearance and color may differ from what is shown in the manual, please refer to the actual product. Every effort has been made to make all descriptions in the book accurate, but inevitably there are still inaccuracies, if in doubt, please contact your dealer or AUTOOL after-service centre, we are not responsible for any consequences arising from misunderstandings.



## RETURN & EXCHANGE SERVICE

### Return & Exchange

- If you are an AUTOOL user and are not satisfied with the AUTOOL products purchased from the online authorized shopping platform and offline authorized dealers, you can return the products within seven days from the date of receipt; or you may exchange it for another product of the same value within 30 days from the date of delivery.
- Returned and exchanged products must be in fully saleable condition with documentation of the relevant bill of sale, all relevant accessories and original packaging.
- AUTOOL will inspect the returned items to ensure that they are in good condition and eligible. Any item that does not pass inspection will be returned to you and you will not receive a refund for the item.
- You can exchange the product through the customer service center or AUTOOL authorized distributors; the policy of return and exchange is to return the product from where it was purchased. If there are difficulties or problems with your return or exchange, please contact AUTOOL Customer Service.

<b>China</b>	400-032-0988
<b>Oversea Zone</b>	+86 0755 23304822
<b>E-mail</b>	aftersale@autooltech.com
<b>Facebook</b>	<a href="https://www.facebook.com/autool.vip">https://www.facebook.com/autool.vip</a>
<b>YouTube</b>	<a href="https://www.youtube.com/c/autooltech">https://www.youtube.com/c/autooltech</a>